


## Machine operation

Additional information (including troubleshooting and service) can be found in the individual sections of the Instructions For Use.



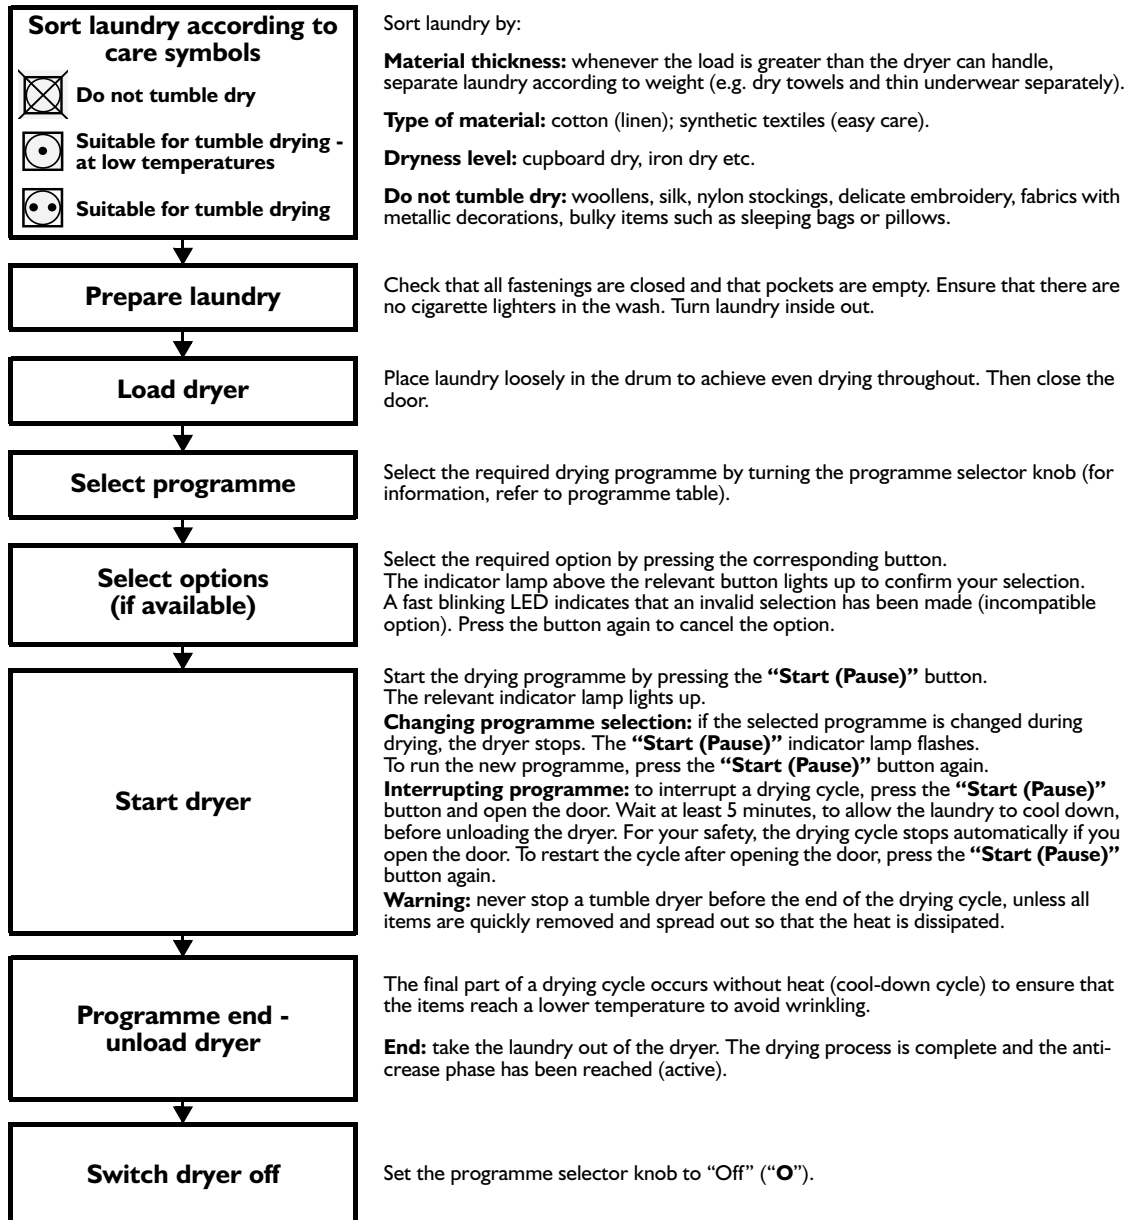

 



Set the programme selector knob to **“Off” (“O”)**.

**Cleaning the lint filter:** open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place (more detailed informations are given in the Instructions For Use).

**Emptying the water container:** pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

**Please note:** only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

Overview of programmes					Options		Approximate drying times (in minutes)	
Programmes / Drying levels		Type of textile	Fabrics	Volume of load kg*	Gentle	Buzzer	Very wet load	Wet load
Cotton	Extra dry	Multi-layered, thick laundry such as: terry towels, terry towelling bath robes.	Cotton or linen hot wash/coloured laundry  Max. 6 kg	3.0	X	X	75'	65'
	Cupboard dry +	Terry towels, dry towels, bed linen, underwear.		6.0	X	X	140'	120'
	Cupboard dry **	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		3.0	X	X	70'	60'
	Iron dry **	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		6.0	X	X	115'	100'
Easy care	Extra dry	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 3 kg	1.0	X	X	35'	25'
	Cupboard dry **	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		3.0	X	X	70'	55'
	Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0	X	X	25'	20'
Special programmes	Delicate plus	Low drying intensity for delicates and items such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres  Max. 2.5 kg	2.5	X	X	85'	70'
	Mixed load	T-shirts, blouses, towels, underwear, sportswear.	Cotton - Synthetic blend  Max. 3 kg	3.0	X	X	80'	60'
Airing	Laundry is aired, refreshed and loosened up for 30 minutes without heating.	All textiles.		—	—	X	—	—
Drying times	20' 30' 40' 60'	Additional drying time for textiles that are not suitable for other programmes, or for finalisation of the drying process.	All fabrics 	—	X	X	20' 30' 40' 60'	

\* Weight of average and maximum load.

\*\* Test programmes according to EN 61121, tested with maximum rated load capacity.

## How to proceed if...

**...you want to check the dryer yourself first:** (If your machine is not functioning correctly, please check the following points before calling the Customer Service department - also refer to relevant section in the Instructions For Use).








<b>Drying takes too long/ Laundry is not dry enough</b>	→	<ul style="list-style-type: none"> <li>• Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)?</li> <li>• Is the lint filter dirty? (filter indicator light on)</li> <li>• Is the heat exchanger dirty? (for more information, refer to the Instructions For Use)</li> <li>• Is the room temperature too high?</li> <li>• Are the “End” and “Anti-crease” indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.</li> <li>• If the drying result does not meet your expectation, select a drier programme or use the dryness adjustment option (if available).</li> <li>• Are thin and thick laundry mixed? Are different types of materials mixed? Sort the laundry by thickness and material, then dry it again.</li> </ul>
<b>The dryer does not operate (after a power failure, always press the “Start (Pause)” button)</b>	→	<ul style="list-style-type: none"> <li>• Is the plug properly inserted into the mains electricity socket?</li> <li>• Is there a power failure?</li> <li>• Has the fuse blown?</li> <li>• Is the door properly closed?</li> <li>• Has a drying programme been selected?</li> <li>• Has the “Start (Pause)” button been pressed?</li> <li>• Has the start delay option been selected?</li> <li>• Is the dryer overloaded? → Please remove some of the load.</li> </ul>
<b>Lint filter, water container or heat exchanger indicator lamp on</b>	→	<ul style="list-style-type: none"> <li>• Is the lint filter clean?</li> <li>• Is the water container empty?</li> <li>• Has the water container been inserted correctly?</li> <li>• Is the heat exchanger clean and inserted correctly?</li> </ul>
<b>Water droplets underneath the dryer</b>	→	<ul style="list-style-type: none"> <li>• Has the heat exchanger been inserted correctly?</li> <li>• Has all lint on the heat exchanger seal and the door seal been wiped away?</li> <li>• Has the water container been inserted correctly?</li> <li>• If the direct drain connection is used, is it tight?</li> <li>• Is the dryer levelled?</li> </ul>

**...you want to care for and clean your dryer:**

<b>Clean the filter at the end of every cycle</b>	→	<ul style="list-style-type: none"> <li>• Brush lint using a soft brush or your fingertips.</li> <li>• Close the filter.</li> <li>• Push the filter back into place.</li> </ul>
<b>Empty the water container at the end of every drying cycle</b>	→	<ul style="list-style-type: none"> <li>• Pull the handle to remove the water container.</li> <li>• Empty the water container.</li> <li>• Replace the empty water container by pushing it fully back into place.</li> </ul>
<b>Clean the heat exchanger at least once a month</b>	→	<ul style="list-style-type: none"> <li>• Clean the heat exchanger under running water.</li> <li>• Remove all lint from the seals.</li> <li>• Clean the heat exchanger housing (for further information see section “Cleaning the heat exchanger” in the Instructions for Use).</li> </ul>

## Failure codes

In the event that the dryer malfunctions, one of the following failure codes may be displayed. Depending on the model of your dryer, the failure may be displayed in letters or by different blinking LEDs.

Failure code	LED failure code	Check to be carried out by customer before service call
<b>F01</b>		Please call the After-Sales Service.
<b>F02</b>		Please call the After-Sales Service.
<b>F03</b>		Please call the After-Sales Service.
<b>F04</b>		Please call the After-Sales Service.
<b>F05</b>		Turn the dryer OFF and unplug it. Make sure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F06</b>		Turn the dryer OFF and unplug it. Make sure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F07</b>		Please call the After-Sales Service.
<b>Start LED blinks 2 times per second when pressed</b>	Make sure that the door is correctly closed and the heat exchanger correctly positioned. If the failure reoccurs, please call the After-Sales Service.	



→ LED not blinking



→ LED blinking

Before using the machine, please also read the Instructions For Use carefully!



**AZB 6370**

## Quick Reference Guide



### Indicator lamps



#### Programme selector knob

The drying programme is selected by turning this knob. The **“Start (Pause)”** indicator lamp flashes.



#### “Start (Pause)” button

The drying programme is started by pressing this button. The indicator lamp lights up.



#### Filter

The indicator lamp lights up when the filter and/or the heat exchanger and its housing need to be cleaned.

**Clean the filter at the end of every drying cycle.**



#### Water container

The indicator lamp lights up when the water container needs to be emptied.

The drying cycle is automatically interrupted. Empty the container and restart the drying programme.

**Empty the water container after every drying cycle.**



#### End

The drying programme is finished. Please unload the dryer.



#### Overdry protection / 6<sup>th</sup> Sense

The indicator lights up when a humidity controlled programme is selected, to indicate the activated protection function.



#### Gentle

Selecting this option will reduce the drying temperature. This option cannot be selected when the “Rapid” option is selected (if available).



#### Buzzer

When this option is pressed, a buzzer will indicate the end of the drying cycle. This option deactivates the “Anticrease” function, if it is activated.

**5019 307 01346**

(Subject to technical modifications)